



ISO 9001 Certified

# DNH<sup>AS</sup>

**N-3770 Kragerø  
NORWAY**

Phone: (47) 35 98 56 00  
Fax: (47) 35 98 56 10  
E-mail: dnh@dnh.no  
Web-site: www.dnh.no


**DNH WW Ltd. England** Phone: (44) 1908 275 000  
Fax: (44) 1908 275 100  
E-mail: dnh@dnh.co.uk

**DNH France** Phone: (33) 1 5380 0276  
Fax: (33) 1 4588 1594  
E-mail: etienne@dnh.no

**DNH GmbH Germany** Phone: (49) 040 6569 30 -0  
Fax: (49) 040 6569 30 -30  
E-mail: dnh@dnh.de

**DNH Speakers Inc. USA** Phone: (1) 484 494 5790  
Fax: (1) 484 494 5793  
E-mail: dnh@dnhspeakers.com

## VES-561(T)

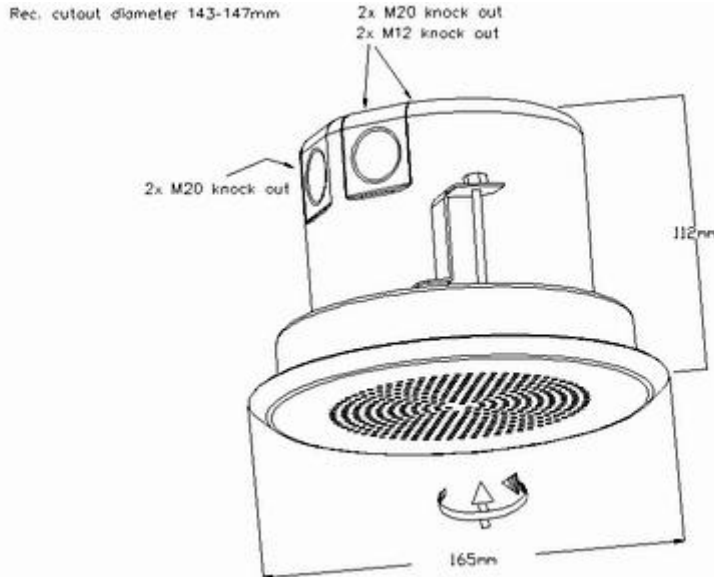


Transformer:  
Combined  
70/100Volt line  
White : Red 100 V  
White : Green 70 V

Secondary nominal  
tappings:  
C : 6 6,0 W  
C : 3 3,0 W  
C : 1,5 1,5 W  
C : 0,5 0,5 W

Acc. British Standard 5839

Sound pressure levels at different frequencies at 1W/1m 1/3 octave pink noise.

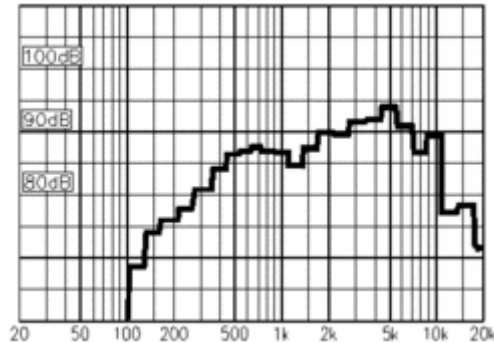

Material/Colour	Steel/White, RAL 9010
Mounting	3screws
Termination	Ceramic terminals
Weight	1.1 kg
IP-rating	0
Max. / min. amb. temp	120°C / -20°C
Rated / max. power	6W / 8 W
SPL 1W/1m	90 db
SPL rated power	97 db
Effective freq. range	200- 12000 Hz
Dispersion (-6dB) 1kHz / 4kHz	185° / 80°
Options	Impedance, color, label

### Installation, Operation and Maintenance Procedures

- | When mounting the loudspeaker please ensure that it is re-assembled in the same manner in which it was received.
- | Install box by turning 3 screws clockwise and the 3 hooks will keep loudspeaker in position. Connect cable to terminal and screw loudspeaker grill clockwise into fixed position.
- | For optimum performance, always use the correct voltage / power and operate within the frequency limits as stated.
- | Do not open loudspeaker when energized.
- | This loudspeaker can also be fitted with a plastic grille, VES-561p(T).
- | This loudspeaker is supplied with a 2 year warranty against defective workmanship.

